



**RADAR**




**SIMPLICITY  
IN VIDEO  
CAPTURE**

# **VERSACAM**

## **QUICK INSTALLATION GUIDE**

# CONNECTION DIAGRAM

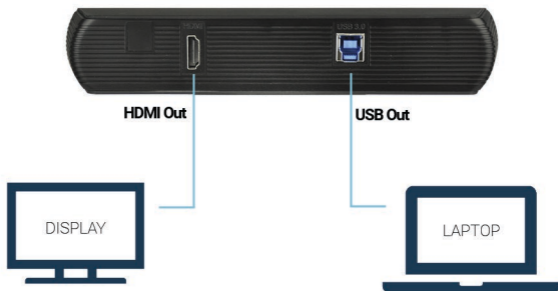


## Versatile mount with thread

1/4" standard thread and foldable bracket makes it easy to mount VersaCam on a bracket, table, shelf, display, and other surfaces.



# REMOTE CONTROL

 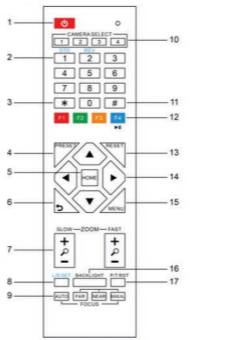


No.	Name	Function Description
1	Standby Key	Enter into standby mode (not supported in VersaCam)
2	Number Key	Calling or transferring presets
3	*Key	Used for settings
4	Preset Key	Press this key & a desired number key (No.2) to set up a preset
5	PTZ Control key	Return to home preset
6	Return Key	Return to the previous menu
7	Zoom Buttons	Zoom in/out slowly (left key) Zoom in/out fast (right key)
8	Left/Right Setting Key	<ul style="list-style-type: none"><li>● Standard: Simultaneously press Left/Right setting key + 1</li><li>● Reverse: Simultaneously press Left/Right setting key + 2</li></ul>
9	Focus Key	Auto/manual/far-end/near-end focus
10	Selection Key	Select the camera to control (VersaCam is set to "1" by default)
11	#Key	Used for settings
12	IR Remote Control Key	[*+ # +F1/F2/F3/F4]: NO.1/2/3/4 address (not supported in VersaCam)
13	Reset Key	Delete presets
14	PTZ control key	PTZ movement according to the pressed arrow key
15	Menu Key	Enter or exit camera menu
16	Backlight Key	Backlight consumption control
17	PTZ reset key	Not supported in VersaCam

## How to select your VersaCam for video conferencing applications:

1. Connect VersaCam via USB to your computer for power, video, and sound.
2. Connect VersaCam via HDMI to a display or hardware device for video.
3. Select VersaCam in VC or other applications as webcam and/or microphone. In both instances, it will be called "HD Camera".

## PACKAGE CONTENT



**Camera**  
**x1**



**Remote Control**  
**x1**



**USB Cable**  
**x1**



**Quick Installation Guide**  
**x1**