

Freestanding Android Digital Poster Installation Guide



Pre-Setup



Please read entire instruction sheet before you start.



Tools: 1 x Allen Wrench

Accessories: 14 Washers

14 Bolts

Instructions


Step 1

Start by removing the screen from the packaging and carefully placing it on a flat soft surface with the LCD panel facing upwards. You will need 2 people to lift this on both ends. You can also use the foam included with the package to make a soft surface.



Step 2

Remove the base from the packaging and familiarise yourself with the direction the base needs to be placed onto the screen. You can also see from the images below the 14 holes needed to connect the base and screen together with the supplied bolts.

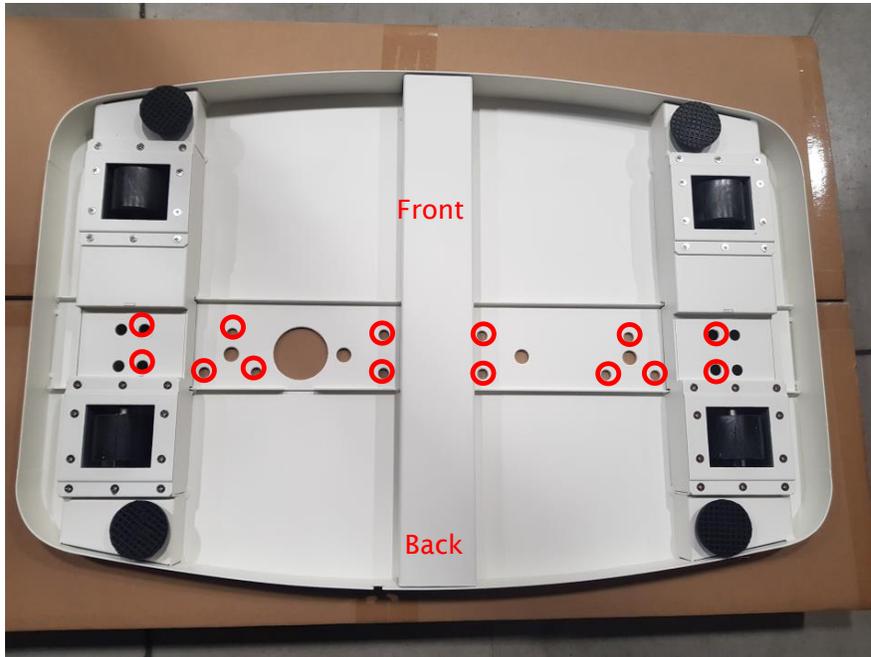

Front



Back


Step 3

Place the supplied washers on to the bolts.



Step 4

Fit the base onto the bottom of the screen whilst aligning the holes as show in **Step 2**.

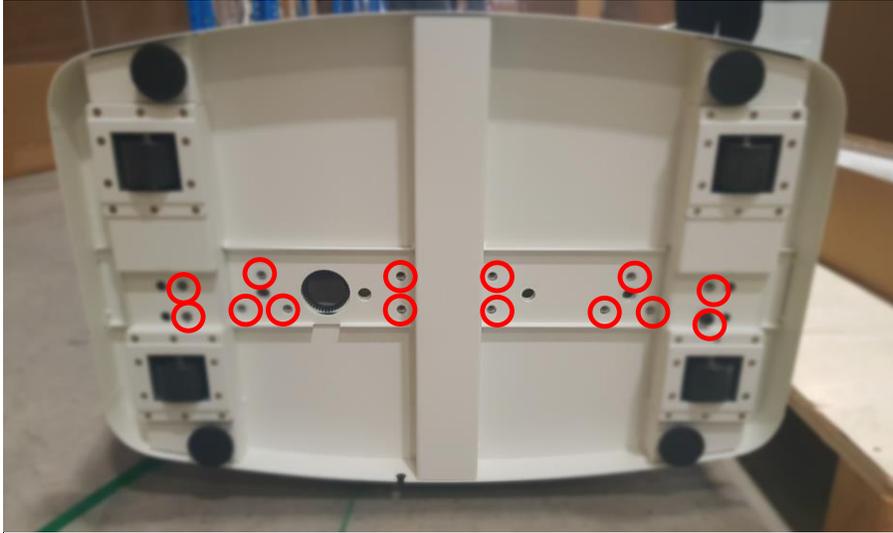

Step 5

Begin screwing the bolts clockwise into each of the holes using an **Allen Wrench** to secure the two pieces together.



Step 6

Carefully stand the unit up with another person and wheel is to the desired location. When connecting the Power cable to a socket, unlock the back panel and place the Power cable through the small gap at the bottom of the unit.



Please note: You can disable the integrated castor wheels by unscrewing the four feet, as shown below.

