

FOS

technologies

FOS 20W RGB



PRODUCT SPECIFICATIONS

TECHNICAL SPECIFICATION

Voltage: AC90~250V, 50HZ/60HZ, Rated Power 250W

Scanner: 30K High-speed optical scanner, $\pm 30^\circ$ big angle scanning

Laser: RGB analog modulate, 10KHZ frequency, 5.5W red laser(638nm), 5.5W green laser(520nm), 11W blue laser(450nm).

Working Modes: Prg mode (SD card program), ILDA mode (SD card program), ILDA mode (PC Control), DMX512 (17 CH), Sound Active, AUTO, Master/Slave

Graphics & Effects: Beam show and animated graphics show patterns

SD card: 1GB

Play Program Format: .ild laser show document

Safety Configure: Security protection, Laser key switch, laser remote interlock, SFS Control (scanner fail safety control ON/OFF).

Interface: 3 pins XLR jack for DMX, DB25/M interface for PC control

Size: 395 x 280 x 240 mm

Weight: 19.8 Kg

ANIMATION LASER SHOW SYSTEM SAFETY NOTES

Thank you very much for choosing our product, for your safety, please read the laser safety instruction and this manual carefully before your operation. This manual includes installation and user information. Please install and operate the laser according to the requirements of this manual and safety guidelines.

DO NOT OVER DRIVE THE SCANNERS. WHEN USING MAX SPEED KEEP THE ANGLE SMALL. FOR MAX ANGLE DO NOT EXCEED 40000PPS ON THE ILDA SOFTWARE SETTING.

Class 3b and 4 Laser Lighting Effect User Safety Guide Important Warnings

Class 4 Lasers have the potential to harm eyesight if viewed directly in the face, and in many instances, this may be the case even if viewed over longer distances of several tens of meters. Therefore, before using the laser product you should familiarize yourself with its operation, and the safety aspects that need to be considered.

Laser lighting effects are quite safe to watch if installed and used correctly and being aware of a few basic factors will help you to achieve this. This guide has been prepared to help provide a basic background to the key safety aspects and is based on current UK health and safety guidance on the use of lasers for public displays.

Installation

The laser should only be installed and operated by those that are aware of how to operate laser, and what the various controls perform.

The laser should be mounted in a suitable and secure position in the venue, so that once in position it is unlikely to be affected by unintended movement.

Prior to installation and operation of the laser, the paths of the beams and effects should be considered, particularly with respect to how they will touch the audience. If direct audience scanning is desired then the laser energy in the effects needs to be considered to decide if the effects are safe for direct viewing.



NOTE! If the signal cable is over 60 m between the DMX512 controller and fixture or between two fixtures, then a DMX signal amplifier is needed as well.

Introduction

Laser lighting products are used to create some of the most vivid and striking visual effects, and are often noted for how they seem to produce solid shapes that cut through the air, and pick up highly defined swirling smoke patterns. The light that is used to create these stunning effects is different from normal

light and therefore several precautions need to be taken when using lasers to ensure that the lighting effects are safe and enjoyable to view. The optical power output from the kind of lasers used for lighting displays can be harmful if not properly setup or is misused. But when used following the recommended health and safety guidelines, laser lighting effects no more harmful than looking at any conventional lighting effect.

Although this guide covers the main points to consider when using laser effects, users are advised to familiarize themselves with other guidance, particularly that issued by the Health and Safety Executive, HS(G)95 The Radiation Safety Of Lasers Used For Display Purposes.

A laser product that emits more than 5mW of light and less than 500mW can be classified as a Class 3B laser product.

A laser product that emits more than 500mW of light and can be classified as a Class 4 laser product.

Class 3B and 4 are safe if used responsibly, and in accordance with the relevant the guidance issued by the Health and Safety Executive.

Class 4 laser devices may cause fires and burn the skin if exposed directly.

In the simplest terms, generally keeping the beams and effects above the audience will not present a hazard to those viewing the show or effects. When you start to aim the laser effects down into the audience area is when it becomes harder to tell if the effects could cause harm. With a Class 3B and 4 laser lighting effect, the problem can arise if the beams or effects hit someone's face. If in doubt, keep the effects above the audience.


Class 3B and 4 laser devices can be harmful to eyesight if viewed directly. i.e. that is, the beam or effect strikes the face of a person directly. The actual injury that a Class 3B and 4 lasers can cause depends upon many factors, including how long the laser beam enters the eye for, the intensity of light, and what part of the eye it gets focused onto. The most susceptible part of the eye to receive damage from a laser is the internal back wall of the eyeball, known as the retina. It is this part of the eye that receives the light signals that are sent to brain. All light entering the eye gets focused onto the retina.

Audience scanning

Audience Scanning is the term commonly used to describe when laser effects are being directly aimed at the viewing audience. This creates a very dramatic looking effect, as people can touch the light, and look down smoky tunnels. But because the laser light can touch or scan past people's faces, it also carries a risk that it could cause damage to people's eyesight, if they are overexposed to the laser light.

The amount of laser light that a person can be exposed to without it causing harm to eyesight is known as the Maximum Permissible Exposure or MPE. These levels are defined the in the British Laser Safety Standard BS/EN 60826-1. When people are exposed to laser light which is above the MPE, it poses a risk of causing eye damage. This could be of concern when the laser effects are viewed directly in the face or there is a chance that they could be.

Rear Panel

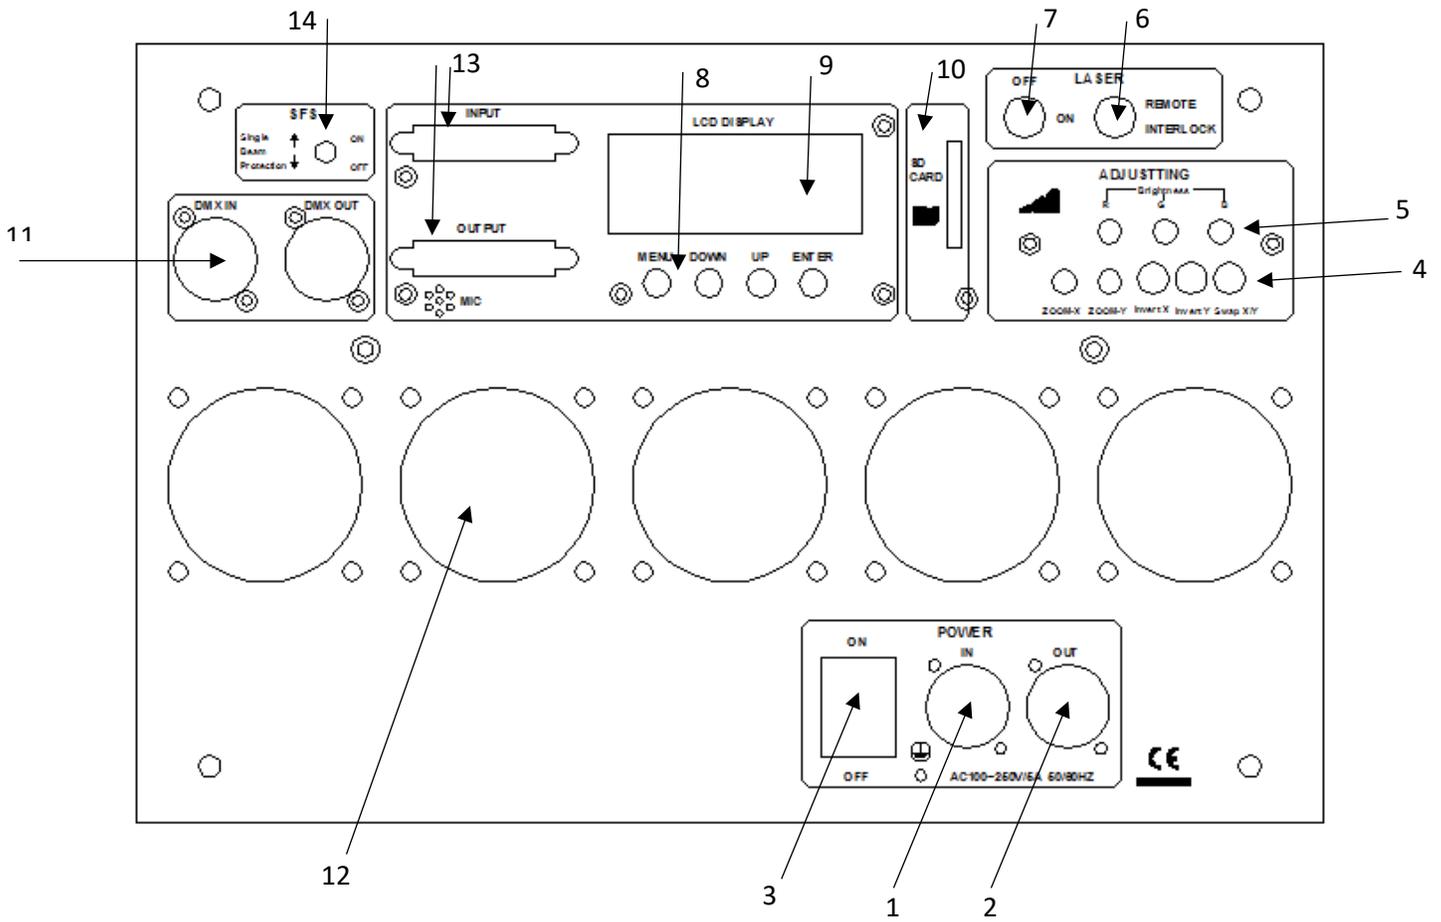

1. Power input
2. Power output
3. Power Switch
4. X/Y adjust knobs
5. RGB balance knobs
6. Laser remote interlock
7. Laser key switch
8. Menu navigation buttons
9. LCD display
10. SD Card Slot
11. DMX Input / Output
12. Cooling fans
13. ILDA Interface
14. Scanner fail safety control switch

Key Operation:

1. Mode: press the key to select mode.
2. Up & Down: Select the current mode's content.
3. Enter: confirmation key.

State of mode and operation:

1. PRG mode: playlist mode, play RGB file. The second row of LCD shows current playlist name. With Up & Down change the playlist, pressing Enter and you change the current folder.
2. ILDA Mode: ILDA play mode, play single ILDA file (extension name is *.ILD, case insensitive) repeatedly. The second row of LCD shows the current playing ILDA file name. Press "UP" and "DOWN" to change ILDA file; press "ENTER" to change current folder.
3. Audio Mode: play built-in sonic programs, press "UP" and "DOWN" to change sonic rhythm.
4. Auto Mode: play built-in auto programs.
5. Dmx Mode: the first row of LCD shows the current mode, the second row shows and DMX address and receiving status of console.
6. Phase Set: can set phase / direction of X and Y separately.

Attention

The system just supports short file name, file name (include folder name), most 8-bit file name and 3 extension name, file name and extension name formed by letter, number and under line. File name can't over 8 and no Chinese words, otherwise the system can't identify it.

SD card can't mix other file, most support 20 folders, every folder can save maximum 255 files and 10 PRG files.

Program table: user can use notepad to edit program list, the extension name is *.PRG. Program table formed by play file name, play speed, play times, ishow identify code "i" (if use ishow software make ild file), middle using "i" separate. Edit item, for example: one program formed by File1.ild, File2.ild, File3.ild. File1.ild play speed is 30K, replay 3 times; file2.ild play speed is 35K, play one time, , and file 2 is made by ishow software; file3.ild play speed is 30K, play 4 times. Then prg1.prg contents as below:

File1.ild,30,3,0

File2.ild,35,1,i

File3.ild,30,4

When create one folder, need create the same PRG file under the folder, and put all the files need to play in the folder into the PRG file. For example, under aurora folder, create aurora.prg file. After adding ILDA file, need add the file to prg file, so that we can find the file quickly and play the file as per the speed you set.

DMX Operation

Channel	Function	Value	Description	
CH1	Model Select	0-49	Auto Mode	
		50-99	Audio (Sound Active) mode	
		100-149	PRG Mode	
		150-199	ILD mode	
		200-255	Manual Mode	
CH2	Pattern/Folder Select	0-255	Manual mode	PRG/ILD mode
			Pattern select, every 3 value one pattern	File select
CH3	Flashing/File Select	0-10	No strobe	Play file select
		11-199	Auto strobe	
		200-255	Audio strobe	
CH4	RGB Models Color Select	0-5	Laser Off	
		6-10	Build-in color of pattern	
		11-16	White	
		17-33	Red	
		34-50	Green	
		61-67	Blue	
		68-84	Yellow	
		85-101	Purple	
		102-118	Cyan	
		119-135	White, red, green, blue color section	
		136-152	Blue, yellow, purple, cyan color section	
		153-169	W, R, G, B, Y, P, C 7 color section	
		170-186	W, R, G, B 4 color flow	
		187-203	B, Y, P, C 4 color flow	
		204-220	B, Y, P, C 4 color flow	
		221-237	Color subsection by inflection	
238-255	Sound active color change			

CH5	X move	0-125	Adjust position by manual
		126-185	Move circle from left to right automatically
		186-225	Jump circle from left to right automatically
		226-245	Auto jumping
		246-255	Audio jumping
CH6	Y move	0-125	Adjust position by manual
		126-185	Move circle from left to right automatically
		186-225	Jump circle from left to right automatically
		226-245	Auto jumping
		246-255	Audio jumping
CH7	Zoom (+/-)	0-10	No change
		11-87	Adjust size by manual
		88-150	Zoom +
		151-200	Zoom -
		201-255	Zoom (+/-) circle
CH8	Rolling X	0	No change
		1-128	Manual rotation
		129-255	Auto rotation
CH9	Rolling Y	0	No change
		1-128	Manual rotation
		129-255	Auto rotation
CH10	Rolling Center	0	No change
		1-128	Manual rotation
		129-192	Auto clockwise rotation
		193-255	Auto counterclockwise rotation
CH11	Drawing	0-10	No change
		10-74	Manual drawing
		75-104	Auto drawing +
		105-144	Auto drawing -
		145-184	Auto drawing circle
		185-224	End to end drawing circle +
		225-255	End to end drawing circle -
CH12	X wave	0-9	No wave
		10-69	Small wave
		70-129	Medium wave

		130-189	Big wave
		190-255	Biggest wave

CH13	Y wave	0-9	No wave
		10-69	Small wave
		70-129	Medium wave
		130-189	Big wave
		190-255	Biggest wave
CH14	Display Mode	0-63	Normal display
		64-127	Light dot display
		128-191	Segment display
		192-255	Dot display
CH15	Red Dimmer	0-255	Dimmer laser output power from 100% to 0%
CH16	Green Dimmer	0-255	Dimmer laser output power from 100% to 0%
CH17	Blue Dimmer	0-255	Dimmer laser output power from 100% to 0%

IR Remote Operation

Button	Function
	Turn laser ON/OFF
Reset	System reset
Auto	AUTO mode, run built-in auto programs
Music	Sound-active mode, run built-in auto programs
DMX	DMX mode
Slave	Master/Slave mode. The effect same as master mode(AUTO/MUSIC mode)
ILD	Run .ILD files in SD card.
PRG	Run .prg play-list files in SD card.
Floder	Select program floder of .ild and .prg
Muiti.	Multi-effects
Anima.	Animation effects
Grat.	Grating multi-pattern effects
3D-L	3D line effects
3D-P	3D plane effects
3D-R	Row effects
Size	Pattern size adjustment with up and down button
Down	Down adjustment
Up	Up adjustment



General Information

Replacing a fuse:

Always disconnect the fixture from main power before replacing a fuse. Use only the appropriate fuse, with the same type and rating. A fuse with different rating, can damage the fixture in case of failure.

Risk of electric shock and / or fire:

The fixture must be earthed, supplied always with its nominal voltage and cleaned periodically from dust. For cleaning use only, a moist cloth. Never use liquids or force water. After cleaning, let the fixture dry before use.